
G. REPLACING THE PRINTHEAD

Regular replacement of the printhead is not necessary. However it may become necessary if you notice a gradual decrease in print quality or if some of the print nozzles are still clogged after repeated manual cleanings as described in Section 5F.


Follow this procedure:

1. Press the Pause and Load/Feed buttons simultaneously to move the print carriage to the center of the print area.

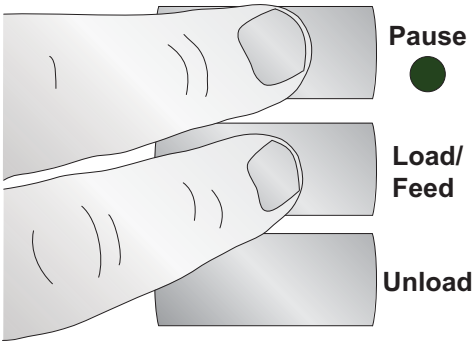


Press Pause + Load/Feed to Start and Finish.


2. Remove all cartridges. Press the release tab at the front of the carriage to release the latch.

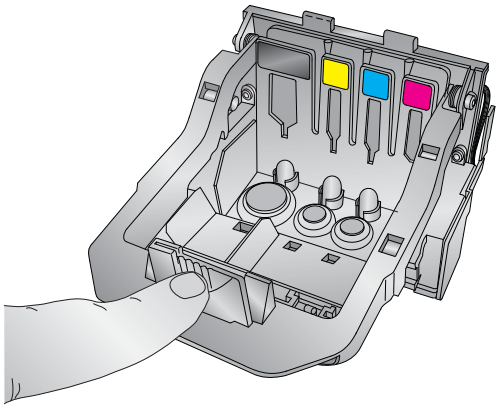


3. Remove the printhead. Grasp the printhead near the back as shown in the illustration.

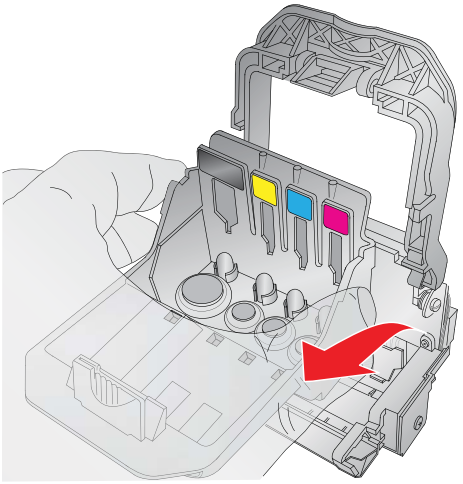


4. Locate a new printhead and place it in the carriage.

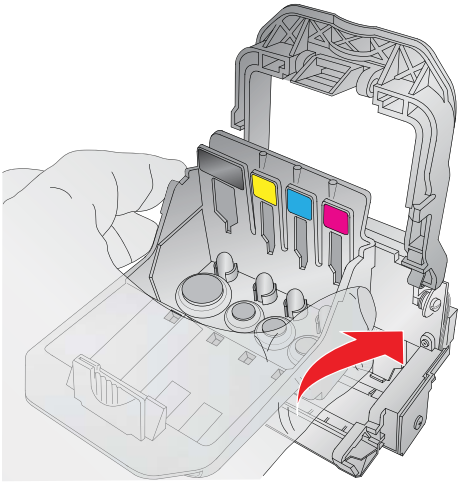

5. Close the latch until you hear a click.

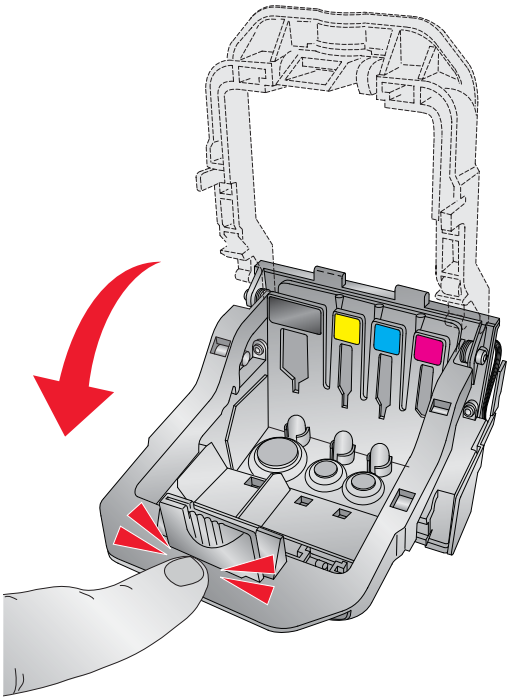

7. Press the Pause and Load/Feed buttons simultaneously to move the print carriage back to normal position.

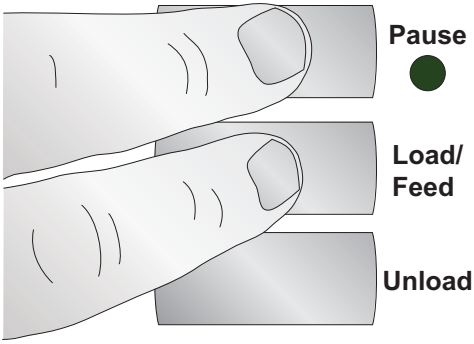

Press Pause + Load/Feed to Start and Finish.

8. Now align the print head as described in Section 5B.